



Ipixo Outdoor Bullet Camera

Start Up Guide

Contents

 
1	What's in the box
2	Get Started
3	Download App
4-5	Register
6-7	Add a Home
8-11	Add Camera
12	Live View
13-14	Add SD card
15	Playback
16-17	Multi Camera View
18-20	Web View
21	Reset
22	Installation

Struggling to read?
View this start up guide online at
time2technology.com/manuals

What's in the box



Outdoor Camera
UK Power Adapter
Wall Mounting Screws

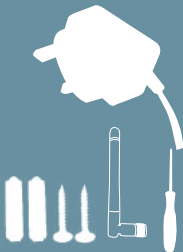

Screw Tool
WiFi Antenna
Start Up Guide



Be ready

You will need your WiFi router password. Write it down below so its handy when you need it!

Get Started

Please complete set up before mounting the camera.


Connect the camera to the mains using the power adapter provided.

The red LED will come on once plugged in and the camera will chime before it is ready to connect.

If you would like the camera to record, you will be required to insert a Micro SD card. The camera will support any sized Micro SD card up to 128 GB.

Reset Button

Micro SD Card Slot

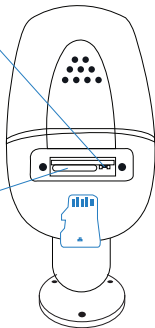

What do the flashing lights mean?



Solid Red
Starting up



 
 
Flashing Red
Ready to connect




Solid Blue
Connected

Download App

Download the “Clan at home” App on the iOS App Store or Google Play Store.

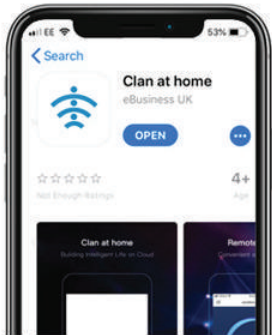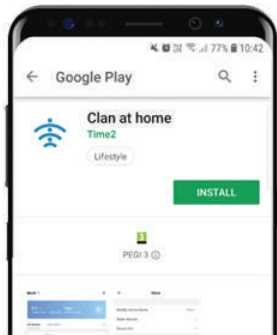

Register

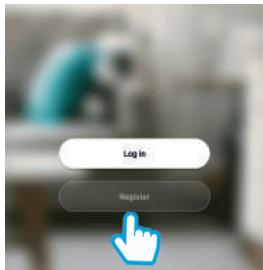

Step 1

Select Register, carefully read the Privacy policy and select Agree if you would like to progress

Register

United Kingdom

Continue


☐ I agree with Service Agreement and Privacy Policy



Step 2

Enter your email address


Register

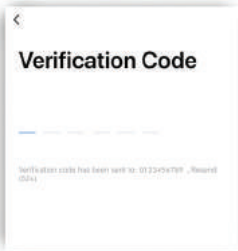

A mobile app screen titled "Verification Code". It features a back arrow in the top left corner. Below the title is a horizontal input field with six segments, each containing a dot. At the bottom, a message states: "Verification code has been sent to: 0123456789 @example.com".

Step 3

Enter the verification code
sent via email

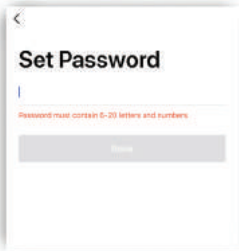


A mobile app screen titled "Set Password". It features a back arrow in the top left corner. Below the title is a password input field with a blue vertical line on the left. Below the input field, a red error message reads: "Password must contain 6-20 letters and numbers". At the bottom is a grey button labeled "Done".

Step 4


Create your password to login

Add Home

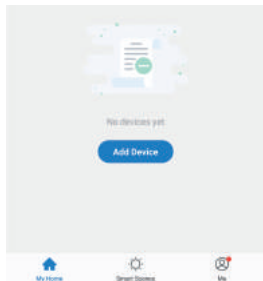

Step 1


Click Me in the bottom right hand corner

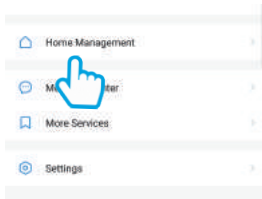

Step 2


Select Home Management

Add Home

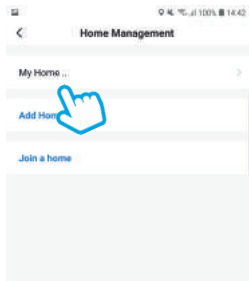

Step 3


Select My Home. Enter a name for your home and a location.
Click Save

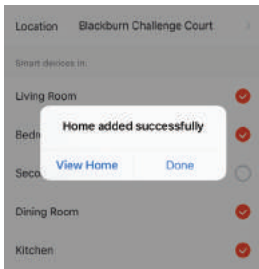

Step 4


Select Complete and your home will be created.

Add Camera

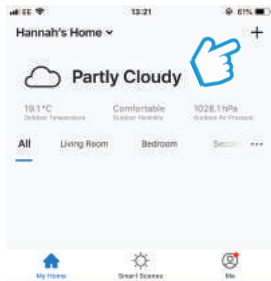

Step 1


In My Home, click the (+) icon in the top right-hand corner of the screen

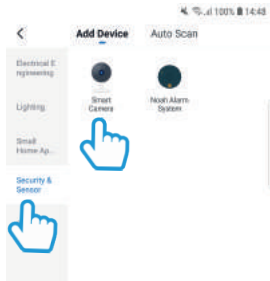

Step 2


Select Security and Sensors on the left hand side and click Smart camera

Add Camera

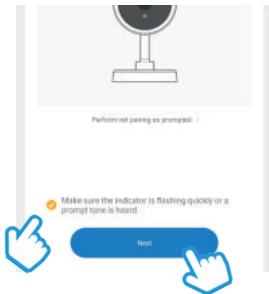

Step 3

Make sure the LED indicator is flashing red, then select the tick box and press Next

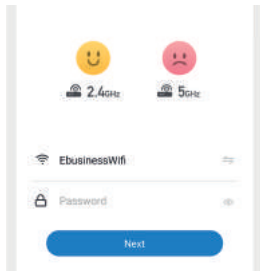


Step 4

Enter your WiFi router password
Then press Next




Add Camera

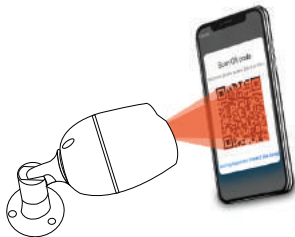

Step 5

Remove the plastic film from the camera lens

Hold your phone up to the camera as described in App

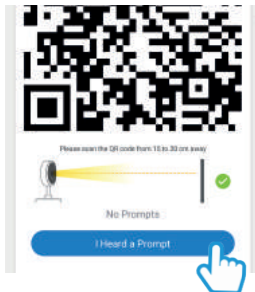


Step 6

If you heard the camera chime, press I Heard a Prompt.


If you don't hear the chime, reposition the camera in front of the phone and scan QR code again.

 Add Camera

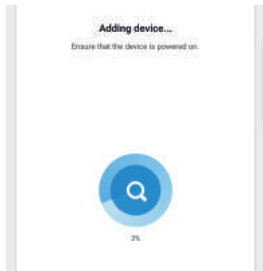

Step 7

The camera will then establish a connection to Clan.

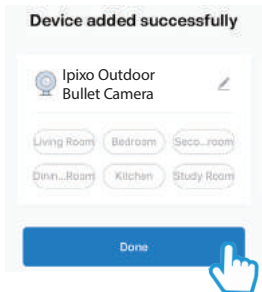


Step 8

Once connected you can change the camera's name and select the room it's in.

Press Done

Live View

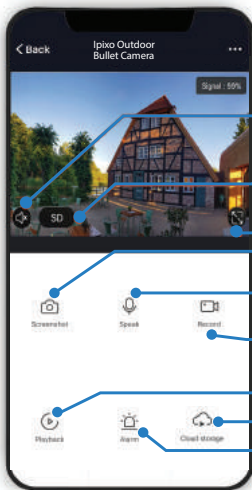

Hear what is happening around the camera

Select the video quality (lower quality may broadcast more smoothly)

Full Screen

Save a screenshot on your smartphone memory

Select to speak into the camera

Record live footage onto your smartphone memory

See recorded footage on the SD cards

See recorded footage on the cloud

Turn on to get instant alerts to your phone when there's movement

Add SD Card

If you would like the camera to record you will be required to insert a Micro SD card. The camera will support any sized Micro SD card up to 128 GB.

Step 1


Turn off power to the camera.

Step 2

Find the Micro SD card slot on the underside of the camera and insert the card into the slot far enough for it to click into place.


Step 3

Turn the power to the camera back on.

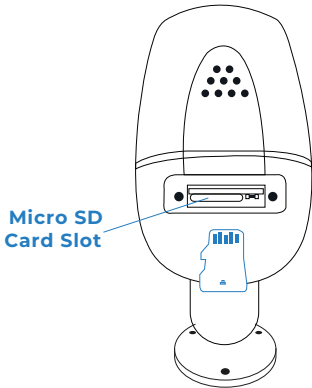

Format SD Card


Before the camera can start recording you will have to format the micro SD card.

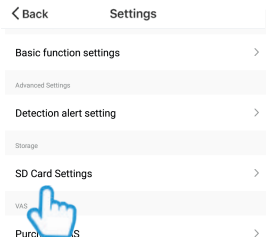

Step 3

Select your camera and click on the pencil icon in the top right

Select SD Card Settings.

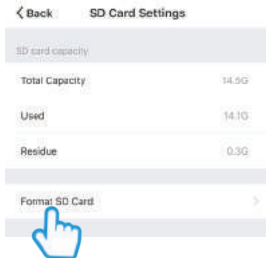

Step 4

Click Format SD Card and press confirm, the camera will begin to format the Micro SD card.

Please note: it will take a couple of minutes to format the card.

Playback



Hear sound around the camera

Full screen


Select the time you want to view

Save the playback camera footage
onto your phone memory

Change date of video playback

Save a screenshot of playback video
onto your phone memory

 
Multi Camera View

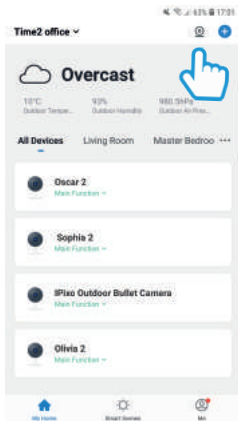


Step 1

Click on the camera on the top right hand corner

 Multi Camera View

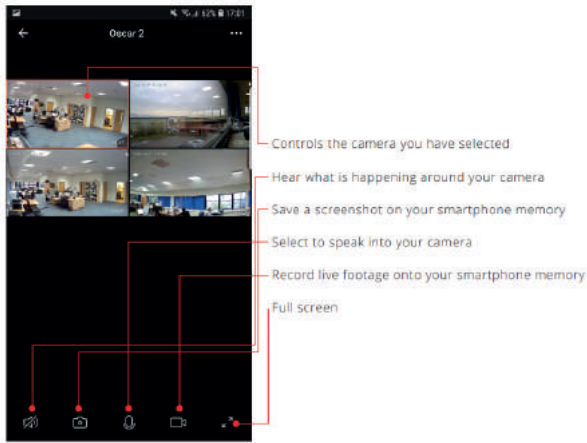


Web View

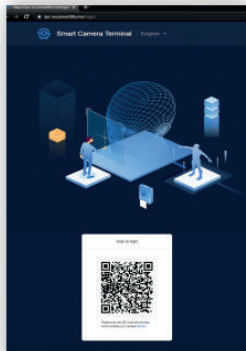 

Step 1

Go to the following website
on your PC.

 
www.time2technology.com/webview
and a QR Code will be displayed

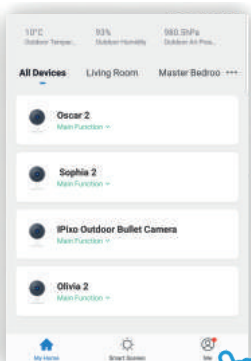

Step 2

Go into the Clan at Home
App and click on Me in the
bottom right hand corner

 Web View

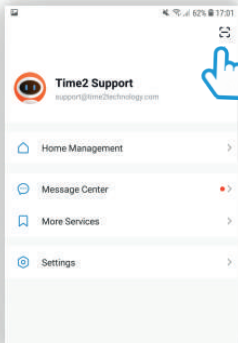

Step 3

Click on the square on the top right hand corner



 
Step 4

Using your phone scan the QR code

Ensure the QR code is within the Green square

Then click confirm to log in

Web View

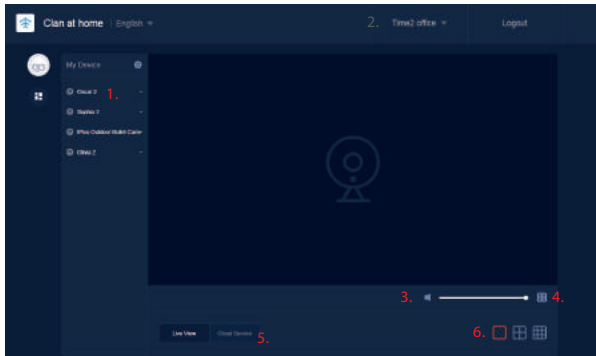

1. Select the home where you would like to view your cameras.
2. Select your camera.
3. Speaker – Listen in on what is going on around your camera.
4. Full screen
5. Cloud Service – View the recorded footage from the Cloud Service.
6. Multi Camera View – Select how many cameras you would like to see at once.

 
Reset

If you are having trouble connecting to the Camera you may need to do a reset.


How to reset the Camera

Hold down the button on the underside of the camera for up to 15 seconds until the camera chimes and the LED is flashing red.

Reset Button

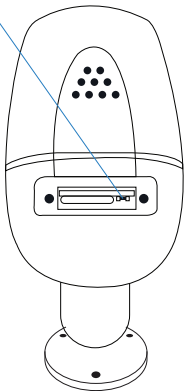

Installation

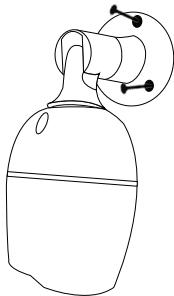 

Easy Mounting

Use the provided wall screws to mount the camera onto the wall.

Adjust the camera angle according to your requirements.